

Side view showing RDS™ seal attached to ISOS™ Inflatable Shut off Seal.


ISOSTM INFLATABLE SHUT OFF SEAL

INSTALLATION INSTRUCTIONS





AESSEAL plc Mill Close, Templeborough, Rotherham, South Yorkshire, England, S60 1BZ. Tel: +44 (0) 1709 369966 Fax: +44 (0) 1709 720788 www.aesseal.com

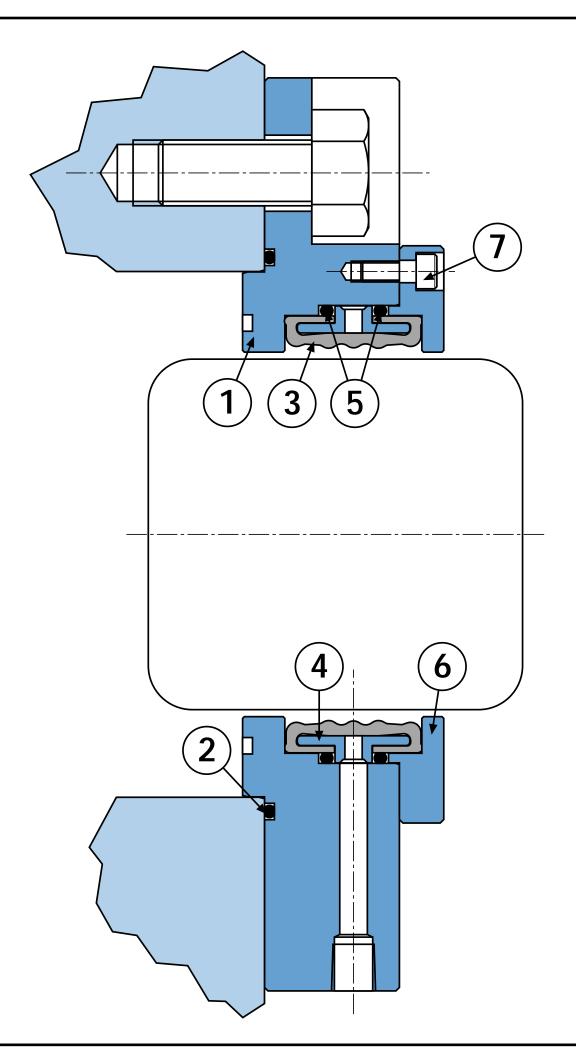



Pre-Installation Checks.

- (i) Shaft Outside Diameter is within tolerance ± 0.002 " (± 0.05 mm)
- (ii) Shaft run out < 0.004" (0.1mm) T.I.R.
- (iii) Fluid seal can be obtained on the Stuffing Box face.
- (iv) There are no sharp edges over which the inflatable bladder (3) must sit. Note: Items 1,3,4,5,6 and 7 are assembled in the factory and all will be called ISOSTM in following instructions..

Installation instructions.

- 1. Insert the Housing O Ring (2) on ISOSTM.
- 2. Insert ISOSTM in the position in correct direction and equally tighten to the Stuffing Box Housing.
- 3. Rotate the shaft to be sure it is not in contact with the Bladder.
- 4. Connect the inflating medium supplier pipes on ISOSTM ports.
- 5. Install the Mechanical Seal in correct direction and equally tighten it to the ISOSTM (follow the installation procedure for each specific Mechanical Seal that is used).
- 6. To operate/inflate ISOSTM (after Mechanical seal was used),
 ALWAYS REMEMBER THE SHAFT MUST NOT ROTATE
 WHILE ISOSTM IS INFLATED.
- 7. After installation of the Mechanical Seal or to run the shaft again,
 ALWAYS REMEMBER TO DE-INFLATE THE ISOSTM BEFORE
 RUNNING THE SHAFT

DECLARATION OF INCORPORATION

This Inflatable seal must not be put into service until the relevant machinery into which it is incorporated has been declared to be in conformity with the provisions of the Machinery Directive.

C.J. Rea Managing Director, AESSEAL plc

(Then

ITEM	DESCRIPTION	MATERIAL
1	Main Housing	316L Stainless Steel
2	Housing O Ring	Viton - EPR - Kalrez - Aflas
3	Inflatable Bladder	EPDM - Nitrile - Viton
4	Inner Ring	316L Stainless Steel
5	Bladder O Ring	Viton - EPR - Kalrez - Aflas
6	Cover Plate	316L Stainless Steel
7	Caphead Bolt	Stainless Steel